

# HI-LITE


# CAB GUARDS



**SIDE BAR CAB GUARD**



**FULL BAR CAB GUARD  
W/OPTIONAL TOOL BOX FOOT & LIGHT POCKETS**

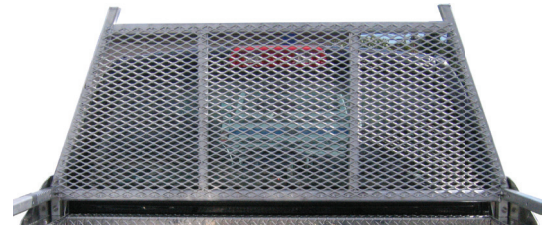

**FULL MESH CAB GUARD**



**STANDARD MOUNT FOOT**



**TOOL BOX MOUNT FOOT**

- MADE FROM 1 1/2" SQUARE ANODIZED ALUMINUM TUBE, 1/8" THICK
- PART NUMBERS FOLLOWED BY AN "N" INDICATE IT IS MADE FROM NON-ANODIZED MATERIAL
- TO ADD LIGHT POCKETS TO A CAB GUARD, ADD "LP" TO THE PART NUMBER
- MOUNT FOOT PURCHASED SEPARATELY

## CHOOSE CAB GUARD

## CHOOSE MOUNT FOOT

YEAR	MODEL	SIDE BAR CAB GUARD	FULL BAR CAB GUARD	FULL MESH CAB GUARD	STANDARD FOOT	STANDARD NO-DRILL FOOT	TOOL BOX FOOT	TOOL BOX NO-DRILL FOOT
<b>CHEV (OTHER APPLICATIONS ARE AVAILABLE)</b>								
14-15	SILVERADO 1500	HC812-143	HC815-143	HC814-143N	HC81111	HC81118 (*)	HC81112	HC81122
15	SILVERADO 2500/3500	HC812-143	HC815-143	HC814-143N	HC81111	HC81118 (*)	HC81112	HC81122
88-14	SILVERADO (1)	HC81203	HC81503	HC81403N	HC81111	HC81118 (*)	HC81112	HC81122
<b>DODGE (OTHER APPLICATIONS ARE AVAILABLE)</b>								
09-14	RAM 1500 (8 & 6.5 BED ONLY)	HC812-137	HC815-137	HC814-137N	HC81111	HC81118 (*)	HC81112	HC81122
09-14	RAM 1500 (5.5 BED ONLY)	HC812-140	HC815-140	HC814-140N	HC81111	HC81118 (*)	HC81112	HC81122
02-08	RAM 1500	HC81273	HC81573	HC81473N	HC81111	HC81118	HC81112	HC81122
10-14	RAM 2500/3500	HC812-137	HC815-137	HC814-137N	HC81111	HC81118 (*)	HC81112	HC81122
03-09	RAM2500/3500	HC81273	HC81573	HC81473N	HC81111	HC81118	HC81112	HC81122
<b>FORD (OTHER APPLICATIONS ARE AVAILABLE)</b>								
09-14	F150	HC812-133	HC815-133	HC814-133N	HC81111	HC81118	HC81112	HC81122
04-08	F150	HC81277	HC81577	HC81477N	HC81111	HC81118	HC81112	HC81122
99-14	F250/F350	HC81263	HC81563	HC81463N	HC81111	HC81118	HC81112	HC81122
82-12	RANGER	HC81241	HC81541	HC81441N	HC81114	N/A	HC81112	N/A
<b>GMC (OTHER APPLICATIONS ARE AVAILABLE)</b>								
14-15	SIERRA 1500	HC812-143	HC815-143	HC814-143N	HC81111	HC81118 (*)	HC81112	HC81122
15	SIERRA 2500/3500 HD	HC812-143	HC815-143	HC814-143N	HC81111	HC81118 (*)	HC81112	HC81122
88-14	SIERRA (1)	HC81203	HC81503	HC81403N	HC81111	HC81118 (*)	HC81112	HC81122
<b>NISSAN (OTHER APPLICATIONS ARE AVAILABLE)</b>								
04-14	FRONTIER	HC81289	HC81589	HC81489N	HC81111	N/A	HC81112	N/A
05-14	TITAN (2)	HC81291	HC81591	HC81491N	N/A	HC81115	N/A	HC8112-15
<b>TOYOTA (OTHER APPLICATIONS ARE AVAILABLE)</b>								
05-14	TACOMA (2)	HC81293	HC81593	HC81493N	N/A	HC81115	N/A	HC8112-15
07-14	TUNDRA (2)	HC812-123	HC815-123	HC814-123N	N/A	HC81115	N/A	HC8112-15

(\*) RECOMMENDED MOUNT FOOT

(1) WILL NOT FIT 2014 SILVERADO/SIERRA 1500 PU & WILL NOT FIT 88-91 SILVERADO/SIERRA CREW CAB or DIESEL PICK UP

(2) RACKS ARE DESIGNED TO FIT WITH FACTORY TRACK TIE DOWN SYSTEM & ARE A NO DRILL INSTALL